

Instructions For Electric Adjustment Motor & Manual Adjustment


Definition:

- ①: It stands for using "original leveling motor" (OE motor).
- ②: It stands for using "manual adjustment apparatus".
- ③: It stands for using "JIN YAN electric adjustment motor".

For instance:

- HU2081-00-1-E → Install "OE motor" and adjust up and down of Hi/Lo beam.
- HU241228-00-1-E → Adjust up and down of Hi/Lo beam by manual tool.
- HU20721-00-1-E → Adjust up and down of Hi/Lo beam by JIN YAN electric motor.

Situation 1 - Instruction for installing "OE motor" onto JIN YAN head light.

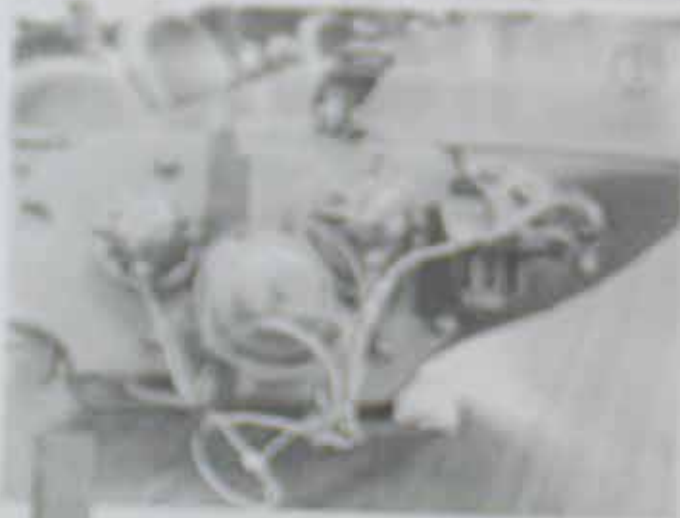

Example: HU2081-00-1-E

Picture 1:

Remove rubber cap from the leveling adjustment position.



Picture 2:


Loose JIN YAN manual adjustment apparatus (30f)



Picture 3.
OE electric adjustment motor

Picture 4:
Install OE electric adjustment motor into socket hole.

Picture 5:
Connect wires to power up the motor, then cover back the rubber cap.

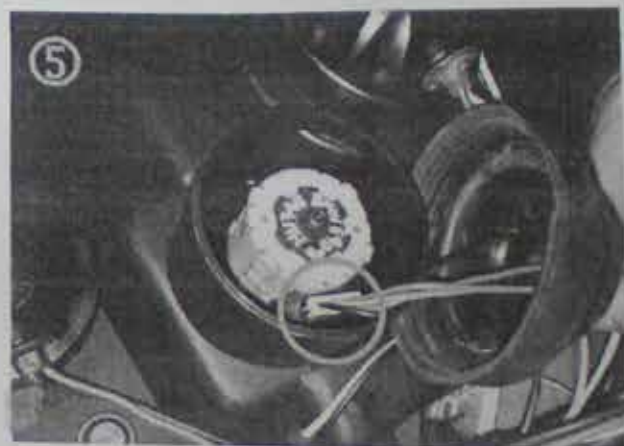


Situation II - Hi/Low beam adjustment by manual bolt.



Example: HU341EM-02-1-E

The circle in picture on the left, there is one bolt that you can adjust up and down for the lighting angle and, in the meanwhile, adjustment screw in the square which is to adjust left and right. With two adjustment bolt and screw, you can adjust lighting angle aiming at the road properly.

Situation III - Hi/Low beam adjustment by JUN YAN electric adjustment motor.

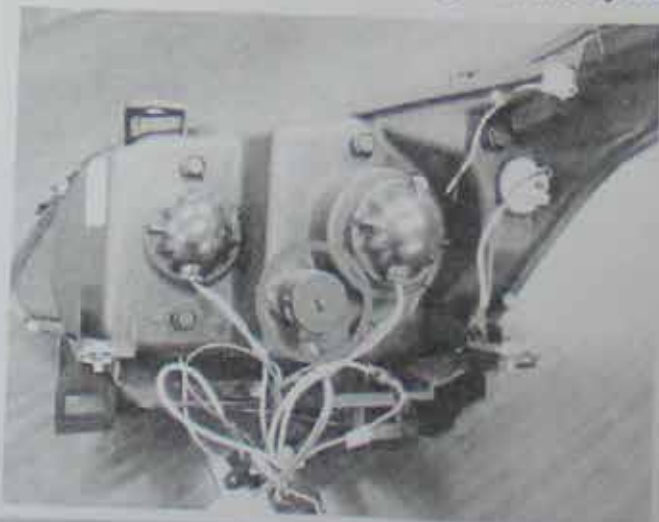

Example: HU353E1-02-1-E

When you buy "E1" type JUN YAN head lamp, the electric adjustment motor is basically equipped onto the head lamp already, so you can simply install the head lamp in car and adjust the lighting angle in the car as you need.

WIRE HARNESS INSTRUCTION

ハーネスの接続ご案内

CONNECT THE BLACK LINE TO THE NEGATIVE OF THE PARK/SIGNAL/ SIDE MARKER LAMP.



リングの接続

黒い線 スモール/マイナスに接続して下さい
 白い線 スモール/プラスに接続して下さい

PULL OUT THE BULB AND CHANGE THE NEW ONE (BULB TYPE: 13.5V/0.27W)



スマールの接続

黒い線 スモール/マイナスに接続して下さい
 白い線 スモール/プラスに接続して下さい

REMOVE THE RUBBER COVER AND UNLOCK THE SOCKET OF THE HALO-RING.



FOLLOW THE INSTRUCTION AND CONNECT THE WIRE



LOCK THE SOCKET BACK AND PUT BACK THE RUBBER COVER. (AVOID THE LEAKING. MAKE SURE THE COVER IS ASSEMBLED STEADILY).




ゴムカバーを取り下ろして下さい。この中のソケットを抜き取ってください。

LEDを接続する時に、図面の+、-の指示通りに接続してください

ソケットを確実に元の位置に装着して、ゴムカバーを覆ってください。水漏れの防止完璧

How to connect the wire with the clip, open the clip put the connect wire into the clip, then close the clip then force it till the clip cover steadily.

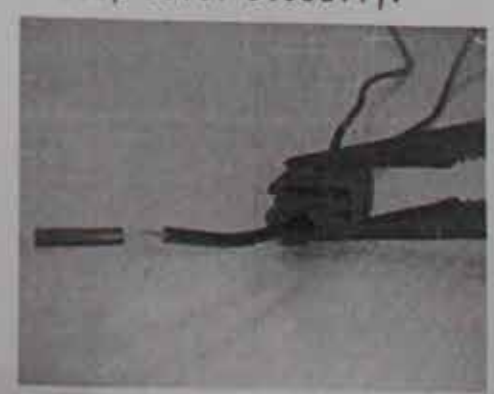

クリップ装着の説明です。

まずクリップをオープンして図面のように電線を中心に差し込んで、手カツールでガツチャとする音までちゃんとクリップを止めて下さい。