




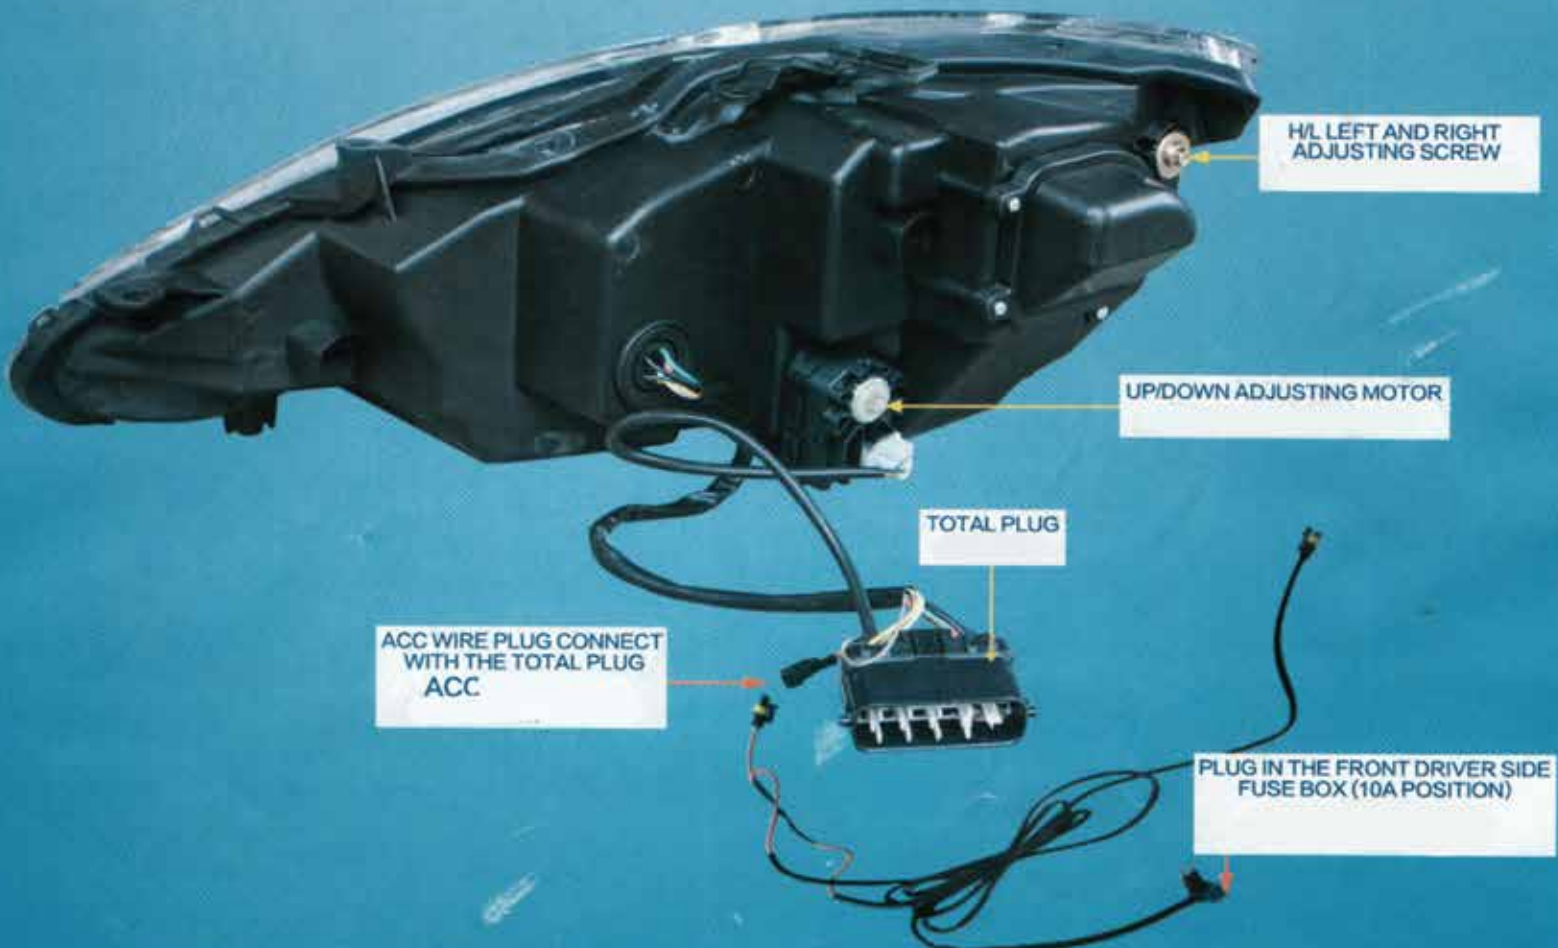


Instructions for HLLXIS250:

LED DRL Headlights Dynamic Turn Light Signal Black Edition
suitable for LEXUS IS XE20 (2006-2013)

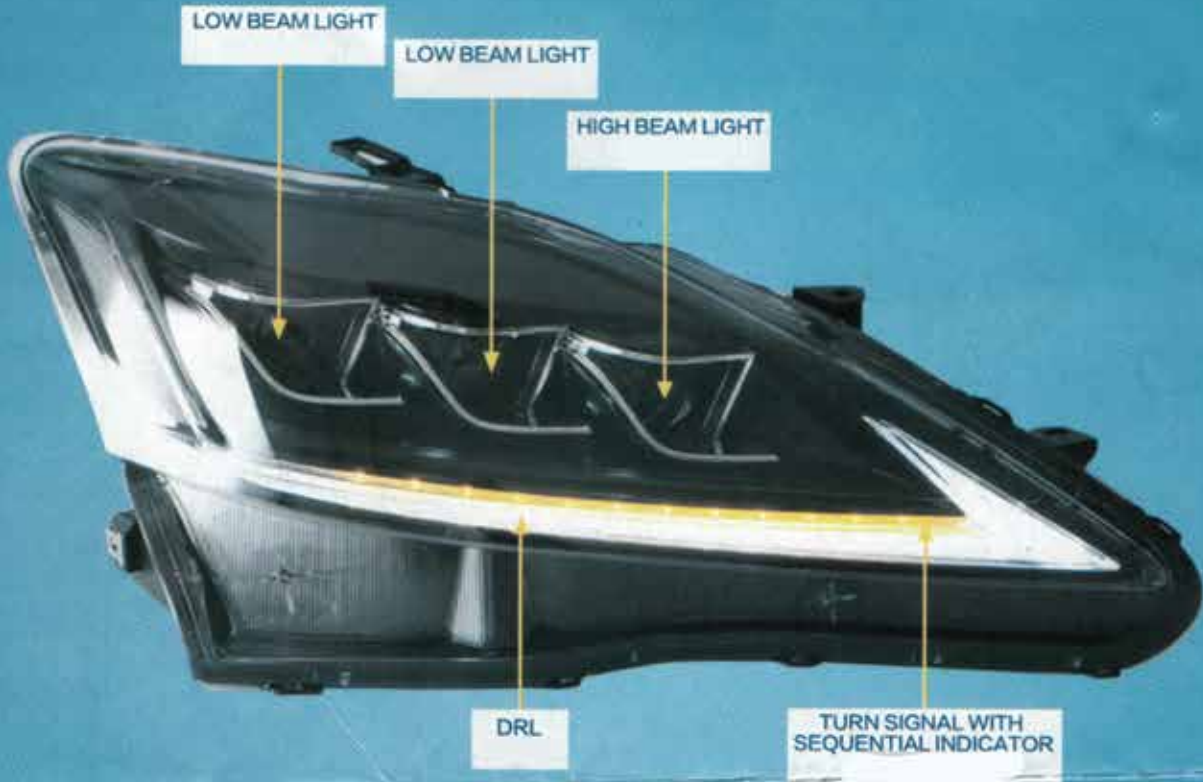

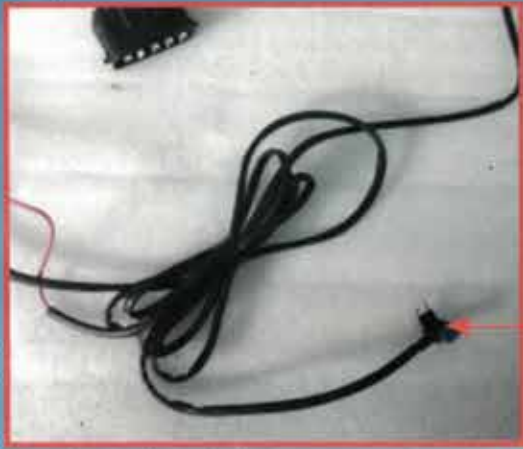

OPEN THE FRONT DRIVER SIDE FUSE BOX, ACC WIRE CONNECT WITH THE ARROW POSITION

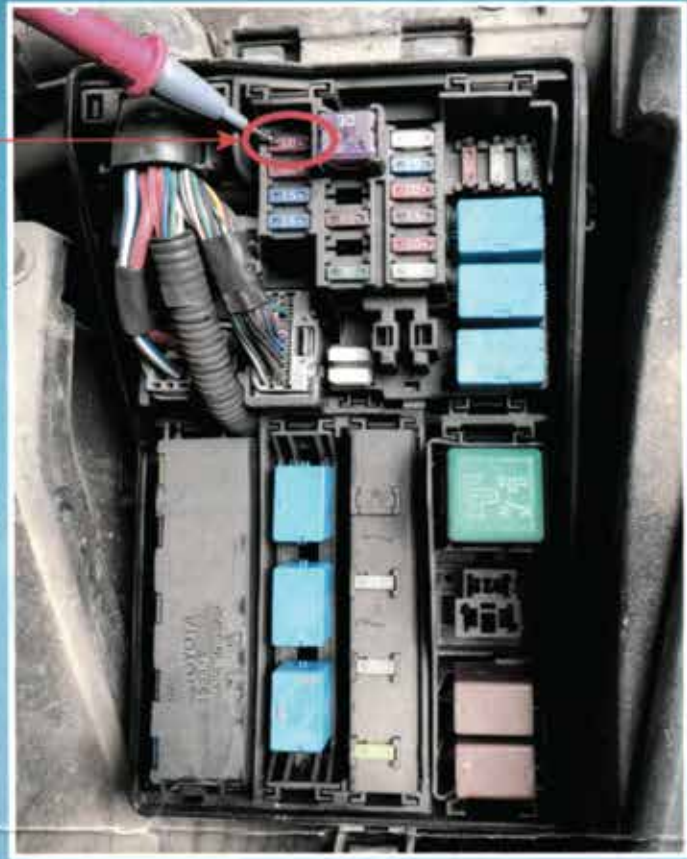

OPEN THE FUSE BOX UNDER THE STEERING WHEEL OF THE CAB, PLUG OUT THE 7.5A FUSE. REMOVE AFS ERROR CODE